



Pro-door

Shower Door System



3 Point White Seal



Labyrinth Joint System



Rising Butt Hinge



Locking System



Lifetime Warranty

*The N&C Phlexicare Pro-Door system enables level access, assisted showering. Our quality constructed, half height shower door system is available in a variety of configurations and sizes for use in wet rooms and shower areas.

- High strength, easy to fit design
- Over 400 pro-door configurations plus made to measure service
- Third fixing point at base of rise and fall hinge for extra stability
- Extended compensators available
- Fixed panels in 50mm increments from 200mm
- Powerful concealed magnetic door seal system
- Available ex-stock (white only)

British manufacturer of carer-led showering solutions

Doors are available as half height (750mm) as standard, although bespoke sizes can be made to order and delivered to any home or site address in England, Scotland or Wales within just 48 hours when orders are placed before 12 noon.

Distribution Centres, Trade Counters & Showrooms

N&C Building Materials
41-51 Freshwater Road
Chadwell Heath
Romford, Essex RM8 1SP
Tel: 020 8586 4600
Fax: 020 0586 4646

Unit 4
Cothill Close
Plympton
Plymouth PL7 1SR
Tel: 01752 339724
Fax: 01752 342746

Units 3 & 4
Cardiff Trade Park
Hadfield Road
Cardiff CF11 8AQ
Tel: 029 2039 0146
Fax: 029 2022 4356

Unit 4
Waterloo Industrial Estate
Flanders Road, Hedge End
Southampton SO30 2QT
Tel: 01489 779700
Fax: 01489 779701

Trade Counters & Showrooms

Units 1A/B Alexander Place
Lower Park Road
New Southgate
London N11 1QD
Tel: 020 8361 6050
Fax: 020 8361 4757

Unit 8 Ascent Park
Edinburgh Way
Harlow Essex CM20 2HW
Tel: 01279 621980
Fax: 01279 621981

Unit 9 - 11 McDonald Business Park
Maylands Avenue, **Hemel Hempstead**
Hertfordshire HP2 7EB
Tel: 01442 234635
Fax: 01442 279501

25 Gunnels Wood Park
Gunnels Wood Road
Stevenage Hertfordshire SG1 2BH
Tel: 01438 315400
Fax: 01438 740338

Unit 14 Meridian Trading Estate
Bugsby Way
Charlton London SE7 7SJ
Tel: 020 8269 5960
Fax: 020 8269 5961

Unit 1 Cliffs Trade Park
Motherwell Way
Lakeside West Thurrock
Essex RM20 3XD
Tel: 01708 680180
Fax: 01708 680181

Unit 8D Pompey Centre
Fratton Way Southsea
Portsmouth PO4 8TA
Tel: 02392 894599
Fax: 02392 894598

Unit E5 Copley Hill Trading Estate
Whitehall Road **Leeds** LS12 1HE
Tel: 0113 243 5644

Leofric House, Off Phoenix Way
Waterman Road **Coventry** CV6 5TP
Tel: 02476 705300
Fax: 02476 705301

Units 10, 11, 14 & 15
Advent Business Park
Advent Way, **Edmonton** N18 3AF
Tel: 020 8807 3227
Fax: 020 8807 3223

2 - 3 Albarn Close
Wyncolls Road, Severalls Park
Colchester Essex CO4 9HY
Tel: 01206 849300
Fax: 01206 845878

Unit 5 Tower Court, St. David's Road
Swansea Enterprise Park
Swansea SA6 8AL
Tel: 01792 797337
Fax: 01792 774019

1 Frensham Road,
Sweetbriar Industrial Estate
Norwich **Norfolk** NR3 2BT
Tel: 01603 409169

www.ncphlexicare.com



Pro-door Shower Door Systems

New launches for 2021

N&C
Phlexicare



Pro-door Advance Rise and Glide Shower Door System

Designed with useability and practicality in mind, the Advance Rise and Glide system features easy operation whereby the doors rise, enabling smooth operation preventing the seals, that keep water in the wet area, from deteriorating over time.

- Manufactured from aluminium and quality PETG unbreakable material
- Doors rise to prevent seals from deteriorating over time
- Doors can be raised by 20mm by pressing the release paddle on the hinge mechanism
- Doors can be lowered by pushing down on the door pad
- All doors supplied with air assist
- Colour contrast fixings for partially sighted users
- 360 degree hinges that can open in all directions for flexibility



Easy open - push paddle to raise door.



Easy lock - press pad down to lower door.



360 degree meshing hinges allow doors to open and fold in all directions.



Strong magnets for watertight fit.



Seals don't drag whilst doors are being opened or closed.

Front entry bifold doors

P6833360		1200mm
P6833361		1300mm
P6833363		1500mm
P6833365		1700mm

Corner entry bifold doors

P6833366		900 x 900mm
P6833367		1000 x 1000mm
P6833369	LH	1300 x 800mm
P6833370	RH	1300 x 800mm
P6833371	LH	1135 x 770mm
P6833372	RH	1135 x 770mm
P6833373	LH	1400 x 900mm
P6833374	RH	1400 x 900mm
P6833375	LH	1500 x 800mm
P6833376	RH	1500 x 800mm

Half and full height fixed panels, with floor to ceiling pole, also available up to 1 metre wide



Silver Pro-door Shower Door System

Our half height Pro-Door system enables easy level access for family members and carers. Our quality constructed, half height shower door system is available in a variety of configurations and sizes for use in wet rooms and shower areas.


- Manufactured from unbreakable PETG material
- Stylish, rounded profiles with colour co-ordinated fixings
- Available in 26 configurations to maximise space and suit the user's needs
- Door styles available: Front and corner entry are available in single folding doors, bi-folding doors, tri-folding doors and fixed panel options
- Extended compensator available (35mm adjustment - total 65mm).
- Doors available as half height (750mm) or bespoke as made to order
- Fixed panel options supplied with 2500mm uprights and wall compensators for installation to the tray, floor and ceiling
- Compatible with most trays and wet floor installations




Pro-door locking system




Each set of Pro-doors is supplied with a pair of appropriate compensators, curtain and track.

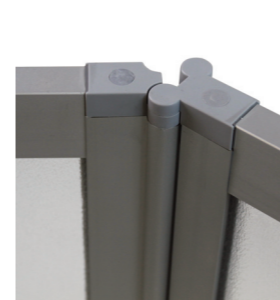

180 degree hinge.

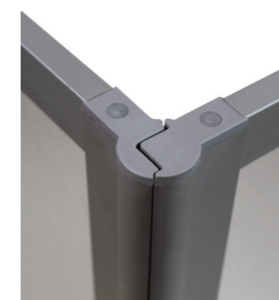

Labyrinth joint system for improved watertight seal.

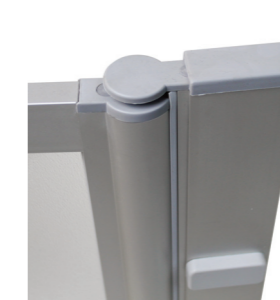

Rising butt hinge helps stops wear on seals and allows easy movement.

