Phlexiflow Pumped Waste Systems

The Phlexiflow Shower Waste Pump System offers a variety of options to suit most installations where gravity drainage is not practical. This extremely quiet Shower Waste Pump is inconspicuous and will easily cope with the output of all electric showers and most mixer valves. The unique design allows the pump to remove water only and not the usual mix of air and water which results in the unnecessary noise of other pump products on the market.




Features and Benefits

- Low voltage ensures safety in the bathroom
- No maintenance required
- Uses 15mm pipework on both the inlet and outlet
- Comes with 15mm 38mm adaptor to existing waste system
- No filter required
- Copes with hair and standard domestic uses
- Double insulated transformer
- Thermal cut-out with automatic reset
- Only one moving part
- Multi exit pack options
- Can be adjusted to suit shower flow rate 4 20ltrs per minute



Self Diagnostic LED Transformer Allows adjustment for pump speed, pumping cycle and end of shower over run.


Phlexiflow Standard

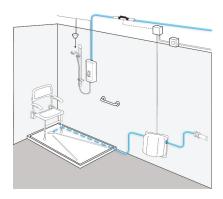

This standard kit comes with a flow switch. Factory pre-set to allow 7-9 litres of water per minute to be removed. It can be adjusted on site to cope with up to 12 litres per minute. For a mixer valve, 2 flow switches are required.

- Low voltage ensures safety
- No maintenance required
- The system uses 15mm pipework on both the inlet and outlet
- Comes with a 15mm to 38mm adaptor to existing waste system
- No filter required
- Copes with hair and domestic use
- Double insulated transformer
- Thermal cut-out with automatic reset
- Only one moving part
- Factory pre-set to remove 7 9 Itrs of water per minute
- 60 minute run time. 30 minute rest


Phlexiflow React

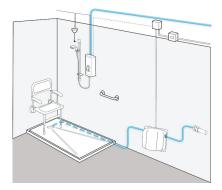

The React system allows the pump to be connected directly to the electric shower thereby eliminating the need for a flow switch.

- Low voltage ensures safety
- No maintenance required
- The system uses 15mm pipework on both the inlet and outlet
- Comes with a 15mm to 38mm adaptor to existing waste system
- No filter required
- Copes with hair and domestic use
- Double insulated transformer
- Thermal cut-out with automatic reset
- Only one moving part
- Factory pre-set to remove 7 9 ltrs of water per minute
- No flow switch required
- Links direct to Mira Advance Extra and Triton Safeguard electric showers
- 60 minute run time. 30 minute rest

Phlexiflow High Capacity

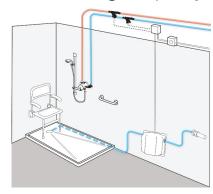

The Phlexiflow High capacity pump is the ideal solution for power showers with an output between 12 - 20 litres per minute.

- Pumps up to 18 litres/min (20 litres/min in short pipe run installations)
- No maintenance required
- Supplied with large bore flexible connections to suit 22mm pipe
- Supplied complete with 2 high capacity flow switches and fittings (standard flow switches not suitable for flow rates above 12 litres/min)
- Supplied with low profile 22mm outlet bottom exit kit, including outlet cover
- Uses Phlexiflow pump & control unit to simplify spares stock and maintenance
- Thermal cut-out with automatic reset
- Only one moving part
- Bottom exit pack only
- 60 minute run time. 30 minute rest







NB. Shower valves require 2 flow switches